

Testarossa


Testarossa

Testarossa

Testarossa


Testarossa

fig.1




REF.	CODE	MHD'd ₁	Ø ₁	L	C	SF..				kg
TRC 14	45 50 114 0030 0	14	14.5 ~ 18	30	1	SFWC 14	•	–	–	0.02
TRC 16	45 50 116 0034 0	16	18 ~ 24	34	1.5	SF.. 16	–	–	•	0.05
TRC 20	45 50 120 0040 0	20	22 ~ 30	40	2.5	SF.. 20	–	–	•	0.1
TRC 25	45 50 125 0050 0	25	28 ~ 40	50	3	SF.. 25	–	•	•	0.2
TRC 32	45 50 132 0063 0	32	35 ~ 53	63	4	SF.. 32	–	•	•	0.35
TRC 40	45 50 140 0080 0	40	48 ~ 66	80	5	SF.. 40	–	•	•	0.7

fig.2



REF.	CODE	MHD'd ₁	Ø ₁	Ø ₂	α	L	C	SFSM ..		kg
TRC 25	45 50 125 0050 0	25	26.5 ~ 39.5	23 ~ 37	15°	50	3	SFSM 25-15°	•	0.2
				20 ~ 34	30°			SFSM 25-30°		
				18 ~ 32	45°			SFSM 25-45°		
TRC 32	45 50 132 0063 0	32	34 ~ 52	30.5 ~ 48.5	15°	63	4	SFSM 32-15°	•	0.35
				27.5 ~ 45.5	30°			SFSM 32-30°		
				25 ~ 42.5	45°			SFSM 32-45°		
TRC 40	45 50 140 0080 0	40	44.5 ~ 65.5	40 ~ 60.5	15°	80	5	SFSM 40-15°	•	0.7
				35.5 ~ 56.5	30°			SFSM 40-30°		
				32 ~ 52.5	45°			SFSM 40-45°		

fig.3




REF.	CODE	MHD'd ₁	Ø ₁	Ø ₂	L	C	SFQC ..		kg
TRC 16	45 50 116 0034 0	16	20 ~ 26	16	27.5	1.5	SFQC 16	•	0.05
TRC 20	45 50 120 0040 0	20	24.5 ~ 33	20	33.5	2.5	SFQC 20	•	0.1
TRC 25	45 50 125 0050 0	25	31.5 ~ 42.5	25	41.5	3	SFQC 25	•	0.2
TRC 32	45 50 132 0063 0	32	38.5 ~ 53.5	32	53	4	SFQC 32	•	0.35
TRC 40	45 50 140 0080 0	40	50.5 ~ 67	40	68	5	SFQC 40	•	0.7

p. 242

p. 218-219

p. 260



Testarossa

Testarossa

Testarossa

Testarossa

Testarossa

TRC 14
TRC 16
TRC 20
TRC 25
TRC 32
TRC 40

Ø 14.5 ~ 66

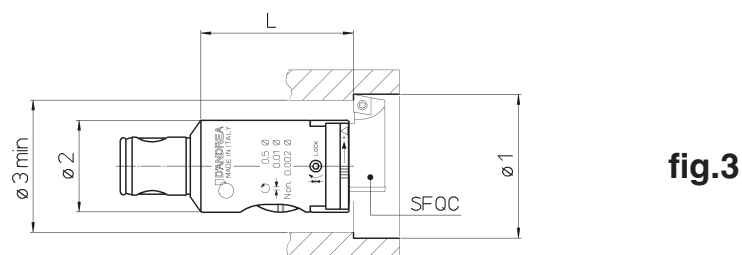
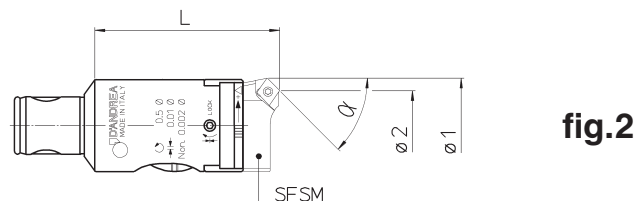
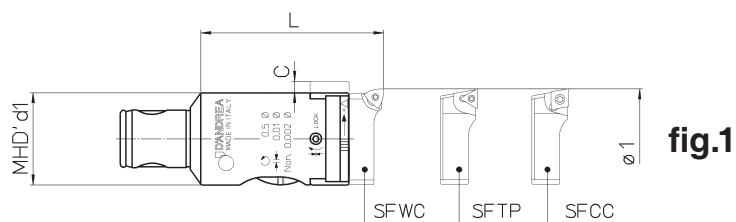
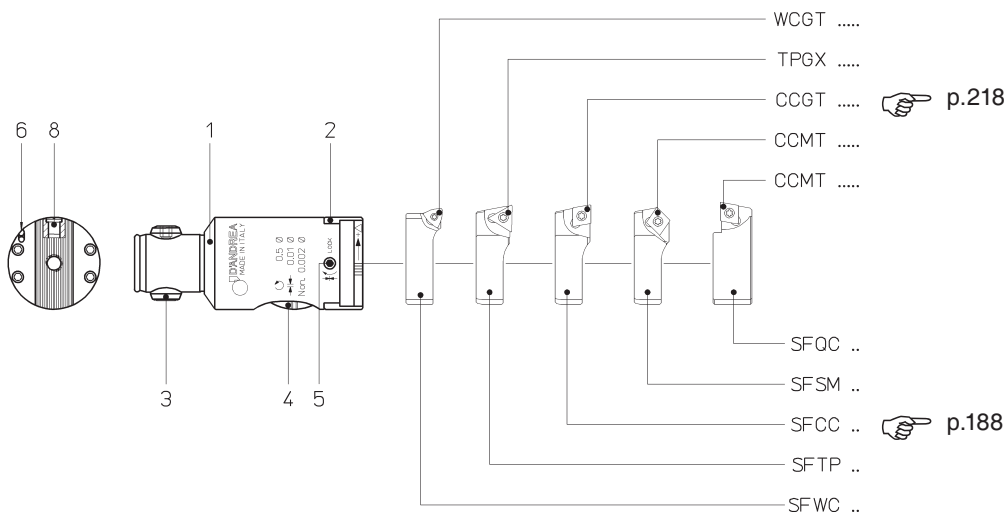


fig.3 Ø3 min = (Ø1+Ø2+1) : 2

COMPONENTS

1. Body
2. Slide toolholder
3. Expanding radial pin
4. Vernier scale
5. Slide clamp screw
6. Coolant outlet
8. Oiler

BAUTEILE

1. Körper
2. Werkzeugschlitten
3. Spreizbolzen
4. Nonius
5. Schlittenklemmschraube
6. Kühlmittelaustritt
8. Schmiernippel

COMPONENTES

1. Cuerpo
2. Guía portaherramientas
3. Perno radial expansible
4. Nonio
5. Tornillo bloqueo guía
6. Agujero salida refrigerante
8. Engrasador

COMPOSANTS

1. Corps
2. Coulisseau
3. Tige radial expansible
4. Vernier
5. Vis blocage coulisseau
6. Sortie du liquide d'arrosage
8. Graisseur

COMPONENTI

1. Corpo
2. Slitta portautensili
3. Perno radiale espandibile
4. Nonio
5. Vite bloccaggio slitta
6. Uscita refrigerante
8. Oliatore

p. 260

p. 218-219

p. 242

